

Installation guide



for the following LEIB CAN modules (only BMW F models of the X3 - X4 series):

- LEIB CAN EXHAUST BASIC
- LEIB CAN EXHAUST LITE
- LEIB CAN EXHAUST PRO
- LEIB CAN DIESEL
- LEIB CAN DELETER
- LEIB CAN START STOP

Table of contents

Haftungsausschluss.....	3
Preliminary work before installation.....	4
Installation	4
Contact details	7

Haftungsausschluss

No guarantee for correctness and accuracy of the information contained herein can be given by LEIB Engineering GmbH & Co. KG. Liability claims against LEIB Engineering GmbH & Co. KG, which refer to material or ideational kind of damages by using or not using the information or rather by using incorrect and incomplete information are basically excluded, in case of demonstrable negligent or grossly negligent fault on the part of LEIB Engineering GmbH & Co. KG. Die LEIB Engineering GmbH & Co. KG formally reserves the right, to change, to add, to delete parts of the pages or the whole offer without separate announcement or to suspend the publication temporary or finally.

Preliminary work before installation

The LEIB CAN OEM module will be mounted at the Central-gateway-module (ZGM) in the floor room at the driver's side. To avoid fault code, please guarantee that the battery is disconnected after the bus system of the car is sleeping. For this purpose, please switch off the ignition and wait until the red control light of the push-button for the warning light system finally disappeared.

Installation

First of all, remove the lower cover at the driver's side. For this remove the two torx metal screws and disconnect the electrical connections.

Now you can start with connecting by cable at the LEIB CAN module. Remove the corresponding plug. All single pins of the plugs must be removed and plugged in again with aid of a pointed tool. The removed pins of the BMW plugs must be plugged in the Y-harness of the LEIB CAN module.

Following pins had to plugged out and in (Figure 1):

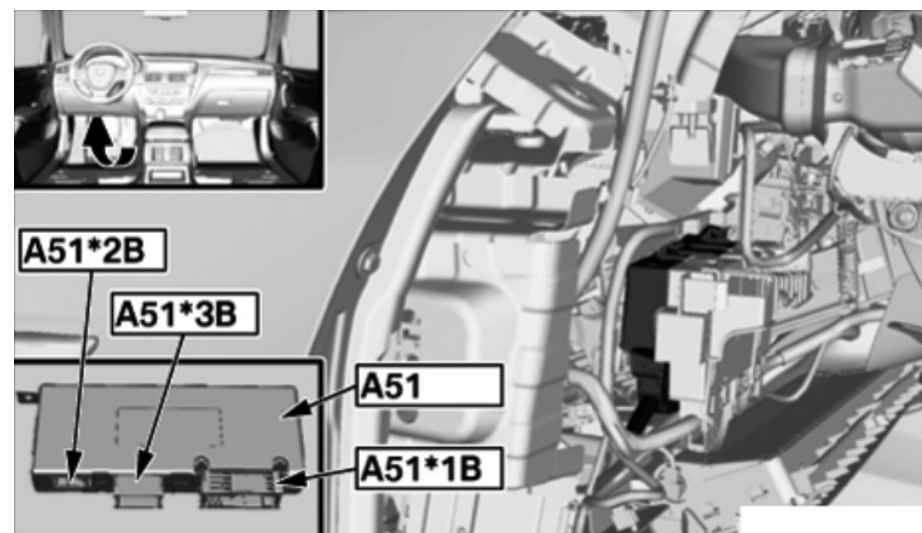


Figure 1 – Central-gateway-module (ZGM)

1. Disconnect PIN 31 (red) from **BMW connector 3B** and insert into the first, supplied 3-pin housing in PIN chamber 1. PIN (red) of the LEIB harness into PIN chamber 31 of the **BMW connector 3B**.
2. Disconnect PIN 13 (green/red) from **BMW connector 2B** and insert into the first, supplied 3-pin housing in PIN chamber 2. PIN (green/red) of the LEIB harness into PIN chamber 13 of the **BMW connector 2B**.
3. Disconnect PIN 24 (brown) from **BMW connector 3B** and insert into the first, supplied 3-pin housing in PIN chamber 3. PIN (brown) of the LEIB harness into PIN chamber 24 of the **BMW connector 3B**.
4. Disconnect PIN 46 (grey) from **BMW connector 8B** and insert into the second, supplied 3-pin housing in PIN chamber 1. PIN (blue/red) of the LEIB harness into PIN chamber 46 of the **BMW connector 8B**.
5. Disconnect PIN 45 (blue) from **BMW connector 8B** and insert into the second, supplied 3-pin housing in PIN chamber 2. PIN (red) of the LEIB harness into PIN chamber 45 of the **BMW connector 8B**.
6. Disconnect PIN 53 (yellow) from **BMW connector 8B** and insert into the second, supplied 3-pin housing in PIN chamber 3. PIN (yellow) of the LEIB harness into PIN chamber 53 of the **BMW connector 8B**.

Now you have to connect the both plugs (Figure 2). The control unit of the LEIB CAN module could be fixed with the supplied cable ties in a suitable place. The installation of the removed parts is done in reverse order.

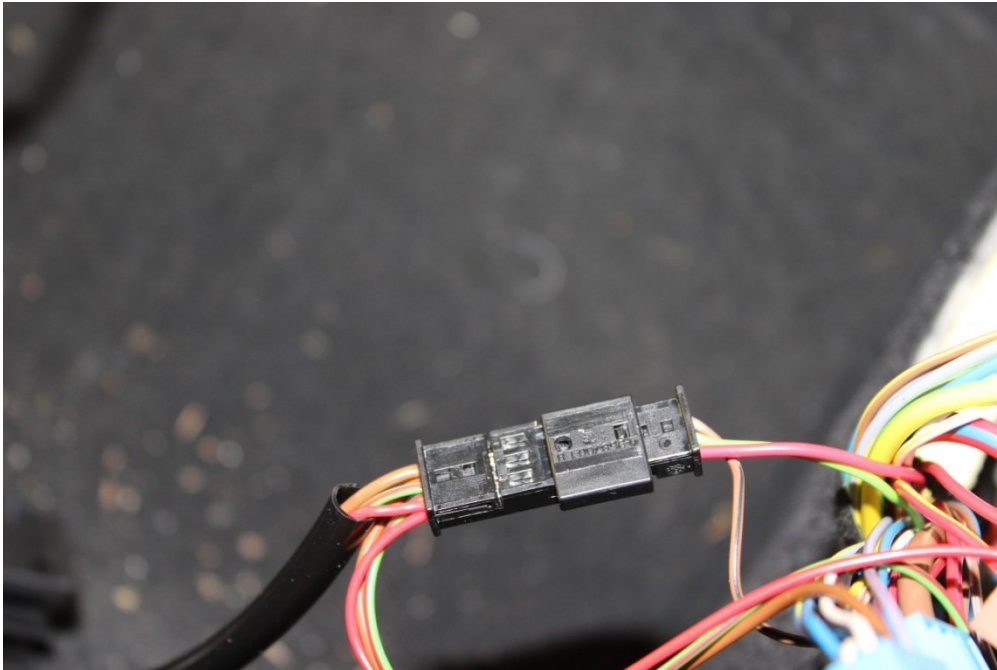


Figure 2 – Connect plugs

Contact details

LEIB Engineering GmbH & Co. KG

Berggärten 5
35644 Hohensolms

Tel.: +49 (0) 641 - 1313221 – 0

Fax.: +49 (0) 641 - 1313221 – 9

www.leib-engineering.de
www.facebook.com/leibengineering